

NSE, NST

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231	Казань (843)206-01-48	Новокузнецк (3843)20-46-81	Смоленск (4812)29-41-54
Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Новосибирск (383)227-86-73	Сочи (862)225-72-31
Астрахань (8512)99-46-04	Калуга (4842)92-23-67	Омск (3812)21-46-40	Ставрополь (8652)20-65-13
Барнаул (3852)73-04-60	Кемерово (3842)65-04-62	Орел (4862)44-53-42	Сургут (3462)77-98-35
Белгород (4722)40-23-64	Киров (8332)68-02-04	Оренбург (3532)37-68-04	Тверь (4822)63-31-35
Брянск (4832)59-03-52	Краснодар (861)203-40-90	Пенза (8412)22-31-16	Томск (3822)98-41-53
Владивосток (423)249-28-31	Красноярск (391)204-63-61	Пермь (342)205-81-47	Тула (4872)74-02-29
Волгоград (844)278-03-48	Курск (4712)77-13-04	Ростов-на-Дону (863)308-18-15	Тюмень (3452)66-21-18
Вологда (8172)26-41-59	Липецк (4742)52-20-81	Рязань (4912)46-61-64	Ульяновск (8422)24-23-59
Воронеж (473)204-51-73	Магнитогорск (3519)55-03-13	Самара (846)206-03-16	Уфа (347)229-48-12
Екатеринбург (343)384-55-89	Москва (495)268-04-70	Санкт-Петербург (812)309-46-40	Хабаровск (4212)92-98-04
Иваново (4932)77-34-06	Мурманск (8152)59-64-93	Саратов (845)249-38-78	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Набережные Челны (8552)20-53-41	Севастополь (8692)22-31-93	Череповец (8202)49-02-64
Иркутск (395)279-98-46	Нижний Новгород (831)429-08-12	Симферополь (3652)67-13-56	Ярославль (4852)69-52-93
Россия (495)268-04-70	Киргизия (996)312-96-26-47	Казахстан (7172)727-132	

Safety Modules

Safety Mat and Safety Edge modules

Types NST02C, NSE02C

CARLO GAVAZZI



- Performance Level d (safety category 3) according to EN 13849-1: 2007
- 2 x 5 A NO safety outputs
- Automatic / manual or monitored manual reset
- Four (NST02C) or two (NSE02C) wire inputs
- LED indication for outputs status and power supply ON
- Connection by fixed screw terminals
- For mounting on DIN-rail in accordance with DIN/EN 50 022
- 22.5 mm Euronorm housing

Product Description

Safety Mat (NST02C) and Safety Edge (NSE02C) modules according to EN 13849-1:2007. These products are the control unit of the safety system for dangerous areas monitoring and they are

designed to be used with the Carlo Gavazzi SM safety mat and SE safety edge. Both automatic/manual or monitored manual restart versions are available.

Ordering Key

N ST 0 2 C B24 S A

Housing	_____
Function	_____
Auxiliary outputs	_____
Safety outputs	_____
Safety category	_____
Power supply	_____
Terminals	_____
Start/Reset type	_____

Type Selection

Safety outputs	Performance Level/ Safety Category	Application	Start/Reset type	Supply: 24 VAC/DC
2 NO	d/3	Safety Mat	Automatic / Manual	N ST 0 2 C B24 S A
2 NO	d/3	Safety Mat	Monitored manual	N ST 0 2 C B24 S C
2 NO	d/3	Safety Edge	Automatic / Manual	N SE 0 2 C B24 S A
2 NO	d/3	Safety Edge	Monitored manual	N SE 0 2 C B24 S C

Time Specifications

Delay ON energisation	≤ 30 ms
Delay ON de-energisation	≤ 30 ms
Recovery time	
Nxx02CB24SA	2 s ± 20%
Nxx02CB24SC	400 ms ± 20%

Input Specifications

Function	4 wires (NST) 2 wires (NSE)
External resistor to be connected between the two layers (NSE02C)	8.2 kΩ
Input current	
NST02C	
Terminals T11-T12	Max. 2 mA
Terminals T21-S22	Max. 2 mA
Terminals S1-S2	Max. 4 mA
NSE02C	
Terminals T11-T22	Max. 2 mA
Terminals S1-S2	Max. 4 mA

Output Specifications

Safety outputs	Performance Level d (Safety category 3) (EN 13849-1: 2007) 2 NO (13-14, 23-24)
Rated insulation voltage	250 VAC (rms)
Contact ratings (AgSnO ₂)	2 μm Au
Resistive loads	AC1 5 A @ 230 VAC DC12 5 A @ 24 VDC
Small inductive loads	AC15 1.5 A @ 230 VAC DC13 1.2 A @ 24 VDC
External contact fuse protection	5 A fast, 4 A slow
Mechanical life	> 10 ⁷ operations
Electrical life	> 10 ⁵ operations
Dielectric strength	
Dielectric voltage	2.5 kVAC (rms)

Supply Specifications

Power supply Rated operational voltage through terminals: A1, A2	Overvoltage cat. III (IEC 60664) 24 VAC $\pm 15\%$, 45 to 65 Hz 24 VDC $\pm 15\%$
Short circuit protection	Internal PTC
Dielectric voltage Supply to input Supply to output Input to output	None 4 kV (1.2/50 μ s) 4 kV (1.2/50 μ s)
Rated operational power	Max. 5 VA

General Specifications

Indication for Power supply ON Output relays ON	LED, green LED, green (CH1, CH2)
Environment Degree of protection Pollution degree Operating temperature Storage temperature	(EN 60529) IP 20 2 0 to 55°C, R.H. < 95% -30 to 65°C, R.H. < 95%
Housing dimensions	22.5 x 84 x 100 mm
Weight	Approx. 200 g
Screw terminals Tightening torque	Max. 0.5 Nm
Approvals	TUV
CE Marking	Yes
EMC Immunity Emission	Electromagnetic Compatibility According to EN 61000-6-2 According to EN 61000-6-3

Mode of Operation

The safety modules NST02C and NSE02C monitor the status and the integrity of Safety Mats and Safety Edge respectively, according to 98/37/CE Machinery Directive.

If the unit is correctly supplied and the safety mat (or edge) is not pressed, the module is enabled to close the safety outputs and the external contactors can be energized.

When the safety mat (edge) is pressed the module opens the safety outputs and the external contactors can not be energized.

Automatic START

Provided that the terminals S1 and S2 are connected and the safety mat (edge) is not pressed, the module closes its own safety outputs.

The relevant CH1 and CH2 LED turn on.

If the safety mat (edge) is pressed (layers in contact to each other), the module immediately forces the safety outputs to open.

After the releasing of the safety mat (edge), a new operating cycle starts when a time of 2 seconds has expired.

Manual START

Provided that the mat (edge) is not pressed, the safety outputs close as soon as the START pushbutton is pushed (connecting S1 and S2).

The relevant CH1 and CH2 LED turn on.

A new operating cycle is possible only after mat (edge) releasing, pushing the START button and waiting for a time of 2 seconds.




Monitored manual START

The monitored manual START versions (NST...C and NSE...C) work as described in the previous paragraph (Manual START) except for a minimum delay of 400 ms from the mat (edge) releasing to the pushing of the START button.

If the mat (edge) is released with the START switch already closed, the safety outputs do not close: it is necessary to release the START button and the safety mat (edge) before starting a new cycle, then (after at least 400 ms) operate again the START button.


It means that if the START button gets welded, the outputs do not close anymore.

Operation Diagrams

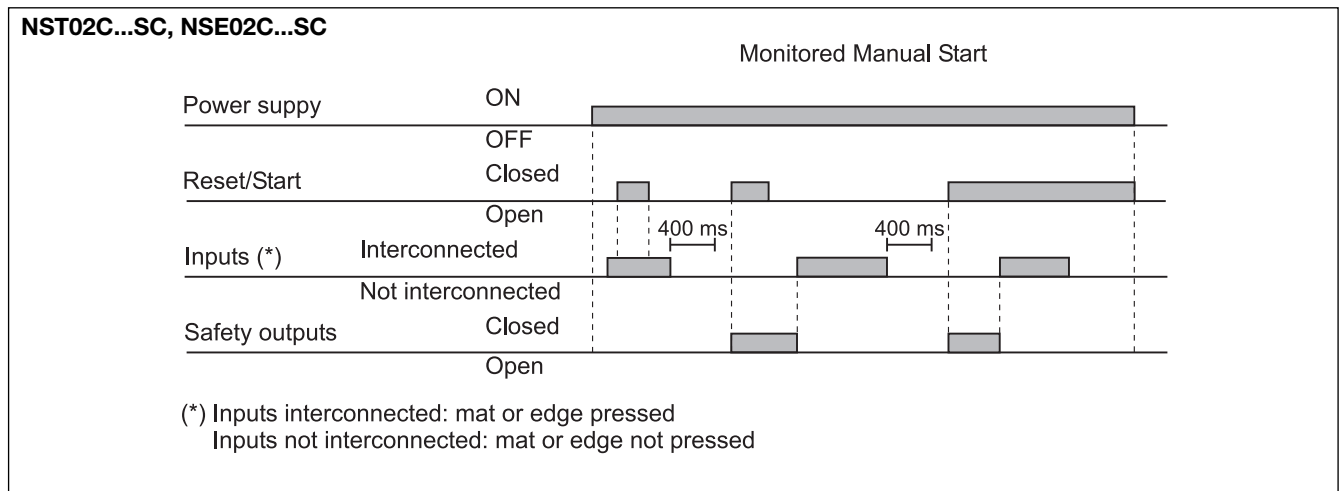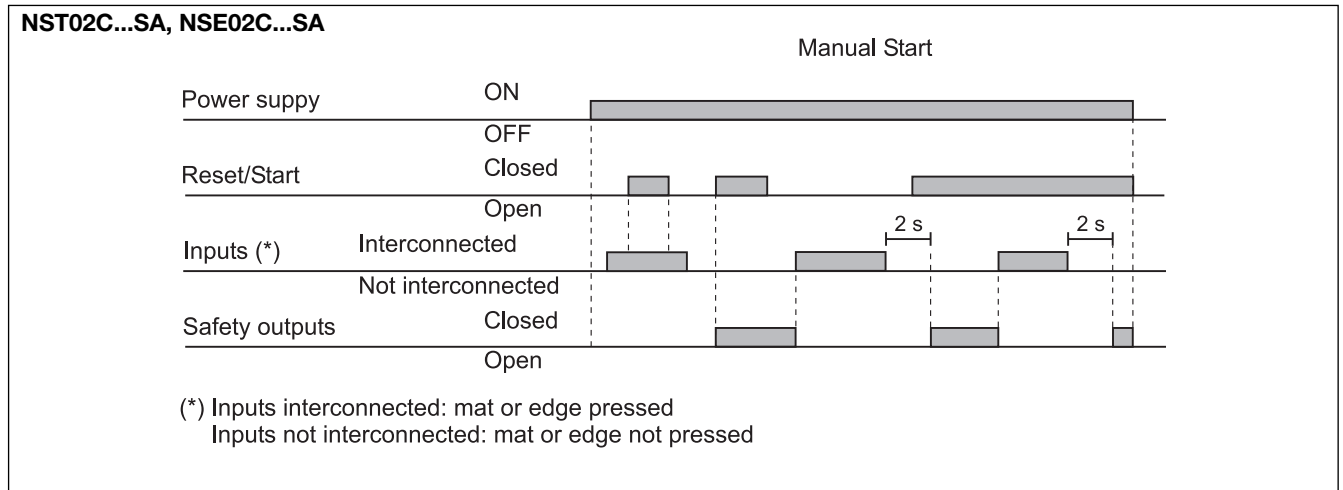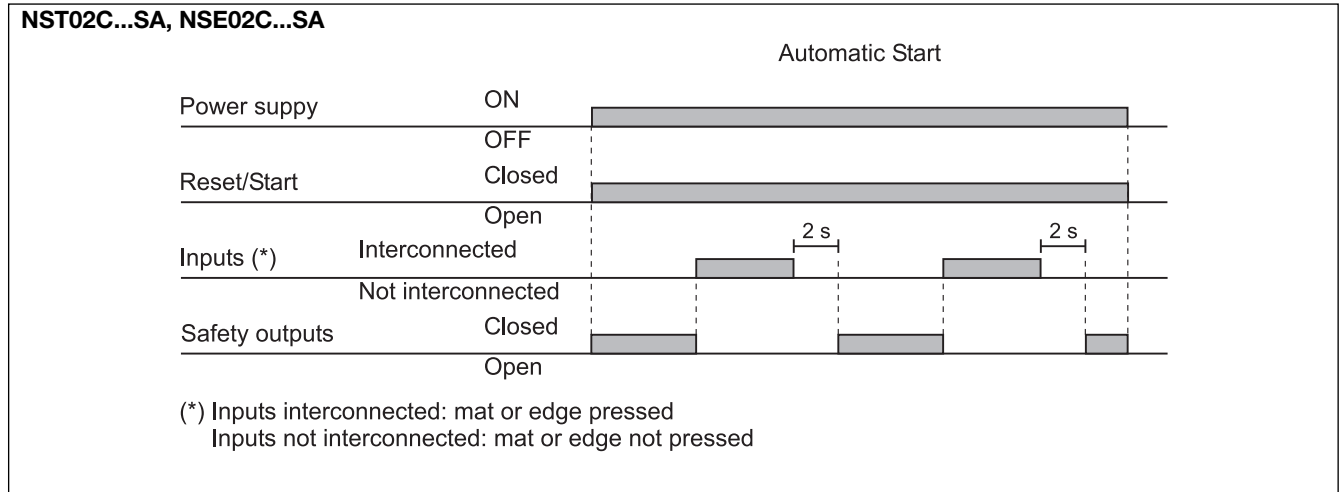


Wiring Diagrams


NST02C...SA, NST02C...SC

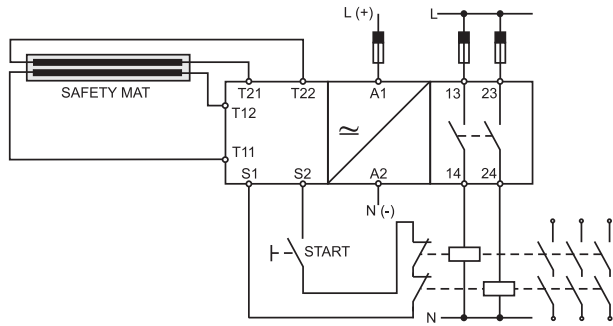

NSE02C...SA, NSE02C...SC

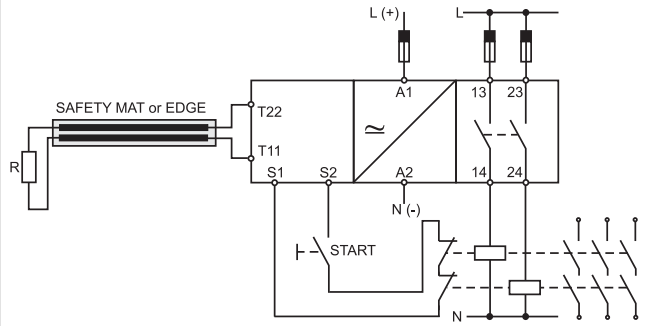

Dimensions

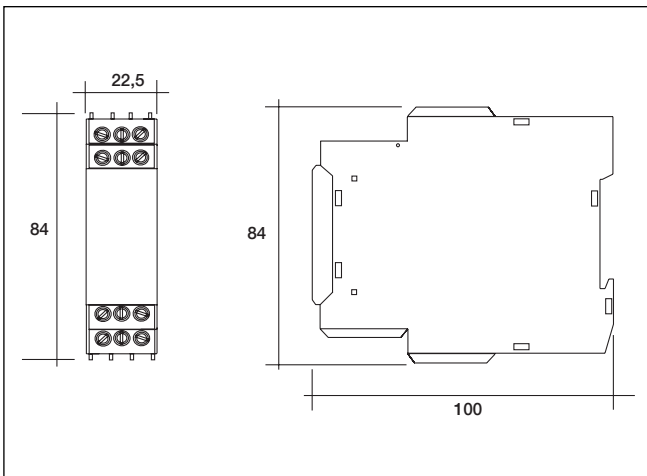

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47

Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93