

# EF1801

## Технические характеристики

### По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231	Казань (843)206-01-48	Новокузнецк (3843)20-46-81	Смоленск (4812)29-41-54
Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Новосибирск (383)227-86-73	Сочи (862)225-72-31
Астрахань (8512)99-46-04	Калуга (4842)92-23-67	Омск (3812)21-46-40	Ставрополь (8652)20-65-13
Барнаул (3852)73-04-60	Кемерово (3842)65-04-62	Орел (4862)44-53-42	Сургут (3462)77-98-35
Белгород (4722)40-23-64	Киров (8332)68-02-04	Оренбург (3532)37-68-04	Тверь (4822)63-31-35
Брянск (4832)59-03-52	Краснодар (861)203-40-90	Пенза (8412)22-31-16	Томск (3822)98-41-53
Владивосток (423)249-28-31	Красноярск (391)204-63-61	Пермь (342)205-81-47	Тула (4872)74-02-29
Волгоград (844)278-03-48	Курск (4712)77-13-04	Ростов-на-Дону (863)308-18-15	Тюмень (3452)66-21-18
Вологда (8172)26-41-59	Липецк (4742)52-20-81	Рязань (4912)46-61-64	Ульяновск (8422)24-23-59
Воронеж (473)204-51-73	Магнитогорск (3519)55-03-13	Самара (846)206-03-16	Уфа (347)229-48-12
Екатеринбург (343)384-55-89	Москва (495)268-04-70	Санкт-Петербург (812)309-46-40	Хабаровск (4212)92-98-04
Иваново (4932)77-34-06	Мурманск (8152)59-64-93	Саратов (845)249-38-78	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Набережные Челны (8552)20-53-41	Севастополь (8692)22-31-93	Череповец (8202)49-02-64
Иркутск (395)279-98-46	Нижний Новгород (831)429-08-12	Симферополь (3652)67-13-56	Ярославль (4852)69-52-93
Россия (495)268-04-70	Киргизия (996)312-96-26-47	Казахстан (7172)727-132	

# Photoelectrics

## Type EF 1801

### Fiber Optic Sensor

CARLO GAVAZZI



- Range: Fiber dependent, typ. 100 mm
- Adjustable sensitivity
- Modulated, red light
- Rated operational voltage: 10 to 40 VDC
- Output: DC 200 mA NPN or PNP
- Make and break switching function, LED indication
- Heavy duty M18 metal housing, IP 67
- Cable and plug versions
- For 2.2 mm fiber cable with 1 mm core
- MB 18 A for DIN-rail mounting (see Accessories)



## Product Description

Used in through-beam, retro-reflective or diffuse-reflective applications depending upon how the additional fibers are mounted. Easily adjustable sensitivity with 270° potentiometer. LED indication for out-

put ON. Short M18 metal housing for heavy duty applications. The fiber allows positioning and mounting in tight spaces with the photoelectric sensor itself mounted in a more convenient location.

## Ordering Key

**EF 18 01 PPA S - 1**

Type \_\_\_\_\_  
Housing diameter \_\_\_\_\_  
Range \_\_\_\_\_  
Output type \_\_\_\_\_  
Housing material \_\_\_\_\_  
Connection type \_\_\_\_\_

## Type Selection

Housing diameter	Rated operating dist. (S <sub>n</sub> )	Ordering no. NPN/cable Make & break swit.	Ordering no. NPN/plug Make & break swit.	Ordering no. PNP/cable Make & break swit.	Ordering no. PNP/plug Make & break swit.
M18	Fiber depend.	EF 1801 NPAS	EF 1801 NPAS-1	EF 1801 PPAS	EF 1801 PPAS-1

## Specifications


<b>Rated operating dist. (S<sub>n</sub>)</b>	Fiber dependent	<b>Operating frequency (f)</b>	120 Hz, light/dark ratio 1:2
<b>Temperature drift</b>	0.4%/K	<b>Response time</b>	
<b>Hysteresis (H)</b> (Differential travel)	3 to 20%	OFF-ON (t <sub>ON</sub> )	≤ 3.2 ms
<b>Rated operational volt. (U<sub>B</sub>)</b>	10 to 40 VDC (ripple included)	ON-OFF (t <sub>OFF</sub> )	≤ 5 ms
<b>Ripple (U<sub>rpp</sub>)</b>	≤ 10%	<b>Power ON delay (t<sub>v</sub>)</b>	Typ. 100 ms
<b>Output current</b>		<b>Indication</b>	Output ON
Continuous (I <sub>a</sub> )	≤ 200 mA	<b>Environment</b>	LED, yellow
Short-time (I)	200 mA, max. load capacity 100 nF	Overvoltage category	III (IEC 60664/664A; 60947-1)
<b>No load supply current (I<sub>o</sub>)</b>	≤ 20 mA,	Pollution degree	3 (IEC 60664/664A; 60947-1)
<b>Min. load current (I<sub>m</sub>)</b>	0.5 mA	Degree of protection	IP 67 (IEC 60529; 60947-1)
<b>OFF-state current (I<sub>r</sub>)</b>	≤ 100 μA	<b>Temperature</b>	
<b>Voltage drop (U<sub>d</sub>)</b>	≤ 2.5 V	Operating	-20° to +60°C (-4° to 140°F)
<b>Protection</b>	Reverse polarity, short circuit, transients	Storage	-30° to +70°C (-22° to 158°F)
<b>Transient voltage</b>	Max. 1 kV/0.5 J	<b>Vibration</b>	10 to 150 Hz, 0.5 mm/7.5 g (IEC 60068-2-6)
<b>Sensitivity</b>	Adjustable, 270° turn potentiometer,	<b>Shock</b>	2 x 1 m & 100 x 0.5 m (IEC 60068-2-32)
<b>Light source</b>	660 nm	<b>Dielectric voltage</b>	500 VAC (rms)
<b>Light type</b>	Red, modulated, synchronized	<b>Housing material</b>	
		Body	Nickel-plated brass
		Front	TPE/POM, black
		Cable end	Polyester, black
		Nuts	Nickel-plated brass




## Specifications (cont.)

<b>Connection</b> Cable	Grey, 2 m, oilproof PVC, 4 x 0.35 mm <sup>2</sup> <b>Note:</b> Other cable lengths on request
Plug (-1) Cables for plug (-1)	M12 CONH1A-. serie
<b>Weight</b> Cable version Plug version	115 g 40 g
<b>CE-marking</b>	Yes

## Dimensions

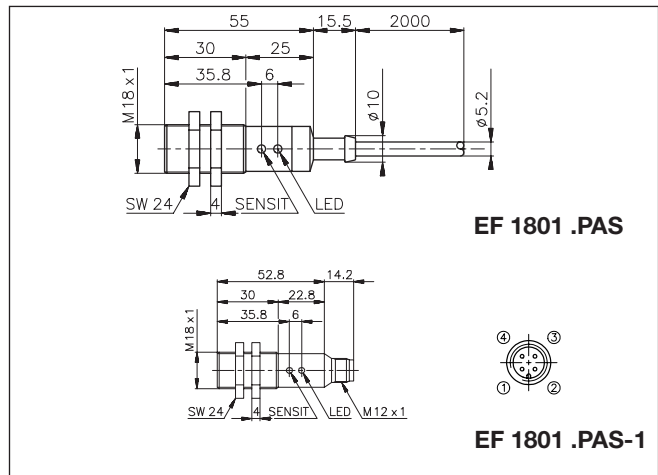


## Operation Diagram

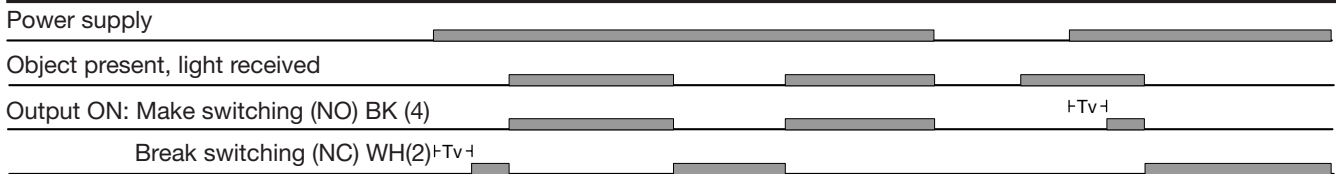

## Truth Table

	Make switching		Break switching	
	No	Yes	No	Yes
Object present	No	Yes	No	Yes
DC types				
LED	OFF	ON	OFF	ON
Load	Non-active	Active	Active	Non-active
Output NPN	High	Low	Low	High
Output PNP	Low	High	High	Low

## Wiring Diagrams

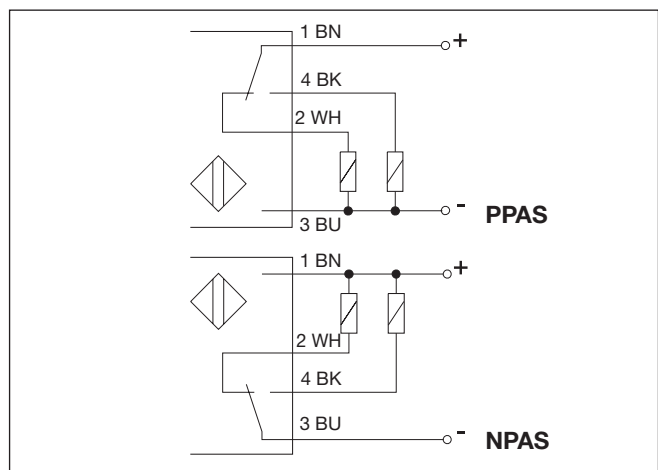

## Accessories

- Fiber optics - call for further information
- Connector type CON.1A../CON.14NF.. serie

Please refer to "Accessories"

## Delivery Contents

- Photoelectric switch: EF 1801....
- 2 nuts
- M18 mounting bracket MB 18A for direct surface or DIN-rail mounting
- Screw driver
- Fiber cutter
- **Packaging:** cardboard box

## Installation Hints


### When you insert the fibers:

- Push the spring-loaded clamp (1) with the enclosed screw driver towards the fiber entries (2). The fiber entries are now open for putting in the fibers.
- Put in the fibers. Be sure that the fibers pass the constriction near the bot-

tom of the hole. The constriction seals the junction (between fiber and photo element) against dust.


**The sensing distance will be reduced if there is an air gap between the fiber and the photo element.**

- Release the clamp to fix the fibers.

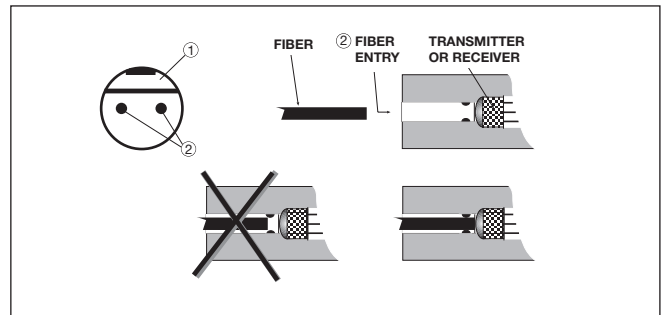


## Installation Hints

*To avoid interference from inductive voltage/current peaks, separate the prox. switch power cables from any other power cables, e.g. motor, contactor or solenoid cables*

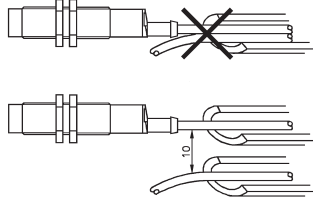


*Relief of cable strain*

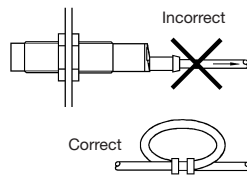


The cable should not be pulled

*Protection of the sensing face*



A proximity switch should not serve as mechanical stop

*Switch mounted on mobile carrier*

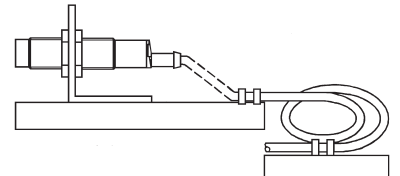

Any repetitive flexing of the cable should be avoided

**По вопросам продаж и поддержки обращайтесь:**

Алматы (7273)495-231	Казань (843)206-01-48	Новокузнецк (3843)20-46-81	Смоленск (4812)29-41-54
Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Новосибирск (383)227-86-73	Сочи (862)225-72-31
Астрахань (8512)99-46-04	Калуга (4842)92-23-67	Омск (3812)21-46-40	Ставрополь (8652)20-65-13
Барнаул (3852)73-04-60	Кемерово (3842)65-04-62	Орел (4862)44-53-42	Сургут (3462)77-98-35
Белгород (4722)40-23-64	Киров (8332)68-02-04	Оренбург (3532)37-68-04	Тверь (4822)63-31-35
Брянск (4832)59-03-52	Краснодар (861)203-40-90	Пенза (8412)22-31-16	Томск (3822)98-41-53
Владивосток (423)249-28-31	Красноярск (391)204-63-61	Пермь (342)205-81-47	Тула (4872)74-02-29
Волгоград (844)278-03-48	Курск (4712)77-13-04	Ростов-на-Дону (863)308-18-15	Тюмень (3452)66-21-18
Вологда (8172)26-41-59	Липецк (4742)52-20-81	Рязань (4912)46-61-64	Ульяновск (8422)24-23-59
Воронеж (473)204-51-73	Магнитогорск (3519)55-03-13	Самара (846)206-03-16	Уфа (347)229-48-12
Екатеринбург (343)384-55-89	Москва (495)268-04-70	Санкт-Петербург (812)309-46-40	Хабаровск (4212)92-98-04
Иваново (4932)77-34-06	Мурманск (8152)59-64-93	Саратов (845)249-38-78	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Набережные Челны (8552)20-53-41	Севастополь (8692)22-31-93	Череповец (8202)49-02-64
Иркутск (395)279-98-46	Нижний Новгород (831)429-08-12	Симферополь (3652)67-13-56	Ярославль (4852)69-52-93
Россия (495)268-04-70	Киргизия (996)312-96-26-47	Казахстан (7172)727-132	