

RF

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89
Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Россия (495)268-04-70

Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Липецк (4742)52-20-81
Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Киргизия (996)312-96-26-47

Новокузнецк (3843)20-46-81
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Пермь (342)205-81-47
Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Симферополь (3652)67-13-56
Казахстан (7172)727-132

Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Тверь (4822)63-31-35
Томск (3822)98-41-53
Тула (4872)74-02-29
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Ярославль (4852)69-52-93

Photoelectrics Fork Sensor Type PF80 FNT .. BP .. T

CARLO GAVAZZI



- Slot width of 3 mm
- Settings: Standard and fine mode
- Teach-In: Push button or by wire
- Universal output: NPN, PNP, NO or NC
- Teach-In lock
- High speed of detection
- Detection of transparent material



Product Description

Detection of labels, marks and double sheets, as well as holes and edges are typical applications for the PF80 fork sensor.

The sensor is made in a strong aluminium housing with 8 mm plug for fast disconnection.

Ordering Key

PF80FNT03BPM5T

Type	_____
Housing style	_____
Housing size	_____
Housing material	_____
Housing length	_____
Detection principle	_____
Slot width (mm)	_____
Output type	_____
Output configuration	_____
Connection type	_____
Teach-In mode	_____

Type Selection

Housing W x H x D	Slot width	Ordering no. NPN, PNP, make or break switching
12 x 37.5 x 80 mm	3 mm	PF 80 FNT 03 BPM5T

Specifications


Fork width	3 mm	Response times	
Sensitivity Teach-In through switch or wire Standard setting Fine setting	ET to V+ 1 pulse 0.3 ... 4 s 1 pulse 0.3 ... 4 s + 1 pause 0.3 ... 1.3 s + 1 pulse 0.3 ... 4 s	OFF-ON (t _{ON}) ON-OFF (t _{OFF})	≤ 50 μs ≤ 50 μs
Temperature drift	≤ 0.4%/°C	Power ON delay (t_v)	≤ 300 ms
Rated operational volt. (U_B)	10 to 30 VDC (ripple included)	Output function NPN and PNP Make or break (light or dark)	Available (push-pull output) Programmed by reversing power supply
Ripple (U_{rpp})	≤ 10%	Indication (function) Uninterrupted light path Free light path	LED, red LED, yellow
Output current Continuous (I _a) Short-time (I)	≤ 100 mA ≤ 100 mA	Environment Installation category Pollution degree Degree of protection	I (IEC 60664/60664A; 60947-1) 3 (IEC 60664/60664A; 60947-1) IP 65 (IEC 60529; 60947-1)
No load supply current (I_o)	≤ 40 mA	Ambient temperature Operating Storage	-20° to +60°C (-4° to +140°F) -20° to +80°C (-4° to +176°F)
Voltage drop (U_d)	≤ 2 VDC @ 100 mA ≤ 1 VDC @ 10 mA	Vibration	10 to 150 Hz, 0.5 mm/7.5 g (IEC 60068-2-6)
Protection	Short-circuit, transients	Shock	2 x 1 m and 100 x 0.5 m (IEC 60068-2-6, 60068-2-32)
Light type Ambient light	Infrared, incandescent light ≤ 3,000 lux		
Operating frequency	10 kHz		




Specifications (cont.)

Rated insulation voltage	50 VAC (rms)
Housing material	
Body	Aluminium, black
Connection	
Plug	M8 x 1, 4-pin, NPB
Weight	Approx. 60 g
CE-marking	Yes

Dimensions

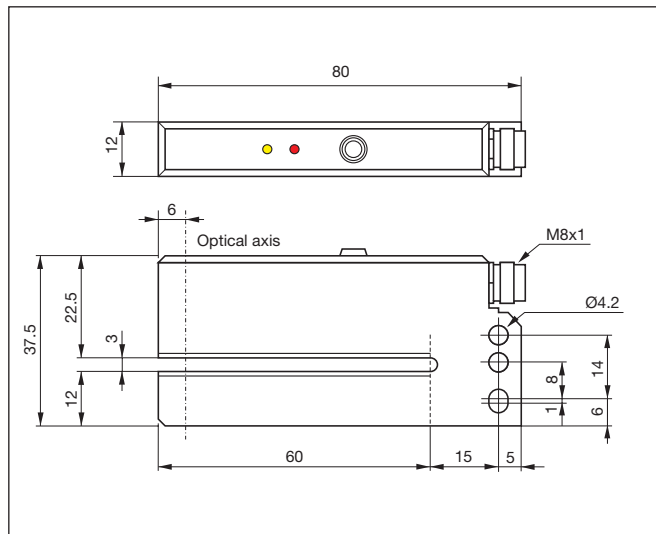

Wiring Diagrams

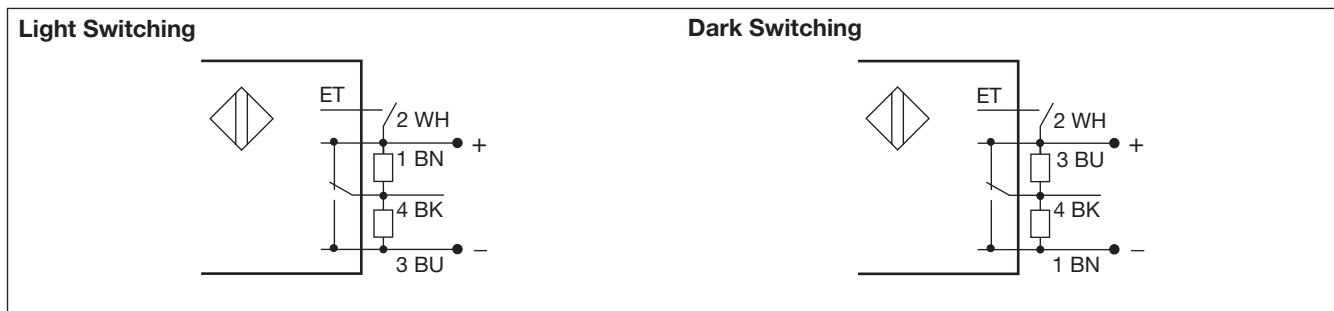

Installation Hints

<p><i>To avoid interference from inductive voltage/current peaks, separate the prox. switch power cables from any other power cables, e.g. motor, contactor or solenoid cables</i></p>	<p>Relief of cable strain</p> <p>Incorrect</p> <p>Correct</p> <p>The cable should not be pulled</p>	<p>Protection of the sensing face</p> <p>A proximity switch should not serve as mechanical stop</p>	<p>Switch mounted on mobile carrier</p> <p>Any repetitive flexing of the cable should be avoided</p>
--	--	--	---

Delivery Contents

- Photoelectric switch: PF 80 FNT 03 BPM5T
- **Packaging:** Cardboard box

Accessories

- Connector type CONG5A-.. series

Teach-In Procedure

Teach-in

The switching threshold is set as described in the following **Teach-in Procedure**. This can be done via the ET wire (External Teach) or by using the Teach-in button on the sensor.

Teach-in Procedure

1) Place the object in the fork opening covering the light beam.

2) Activate Teach-in using the teach button or via the ET wire:

Standard setting:

Press once and the red LED flashes (standard hysteresis).

Fine setting:


Press twice and the yellow LED flashes.

NB! The last taught settings are always stored in the sensor.

Lock and unlock Teach-in

Lock Teach-in function:
Press the teach button for approximately 6 s until the red LED lights continuously.

Unlock Teach-in function:
Press teach button for approximately 6 s until the red LED goes off.



Yellow LED Red LED Teach button

Red LED:	Teach-in lock
Red LED, flashing (2 s):	Standard Teach-in
Yellow LED:	ON
Yellow LED, flashing (2 s):	Fine Teach-in
Red + Yellow, flashing:	Short-circuit or object too opaque

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231	Казань (843)206-01-48	Новокузнецк (3843)20-46-81	Смоленск (4812)29-41-54
Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Новосибирск (383)227-86-73	Сочи (862)225-72-31
Астрахань (8512)99-46-04	Калуга (4842)92-23-67	Омск (3812)21-46-40	Ставрополь (8652)20-65-13
Барнаул (3852)73-04-60	Кемерово (3842)65-04-62	Орел (4862)44-53-42	Сургут (3462)77-98-35
Белгород (4722)40-23-64	Киров (8332)68-02-04	Оренбург (3532)37-68-04	Тверь (4822)63-31-35
Брянск (4832)59-03-52	Краснодар (861)203-40-90	Пенза (8412)22-31-16	Томск (3822)98-41-53
Владивосток (423)249-28-31	Красноярск (391)204-63-61	Пермь (342)205-81-47	Тула (4872)74-02-29
Волгоград (844)278-03-48	Курск (4712)77-13-04	Ростов-на-Дону (863)308-18-15	Тюмень (3452)66-21-18
Вологда (8172)26-41-59	Липецк (4742)52-20-81	Рязань (4912)46-61-64	Ульяновск (8422)24-23-59
Воронеж (473)204-51-73	Магнитогорск (3519)55-03-13	Самара (846)206-03-16	Уфа (347)229-48-12
Екатеринбург (343)384-55-89	Москва (495)268-04-70	Санкт-Петербург (812)309-46-40	Хабаровск (4212)92-98-04
Иваново (4932)77-34-06	Мурманск (8152)59-64-93	Саратов (845)249-38-78	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Набережные Челны (8552)20-53-41	Севастополь (8692)22-31-93	Череповец (8202)49-02-64
Иркутск (395)279-98-46	Нижний Новгород (831)429-08-12	Симферополь (3652)67-13-56	Ярославль (4852)69-52-93
Россия (495)268-04-70	Киргизия (996)312-96-26-47	Казахстан (7172)727-132	